



332/336 CABINET FOUNDATION

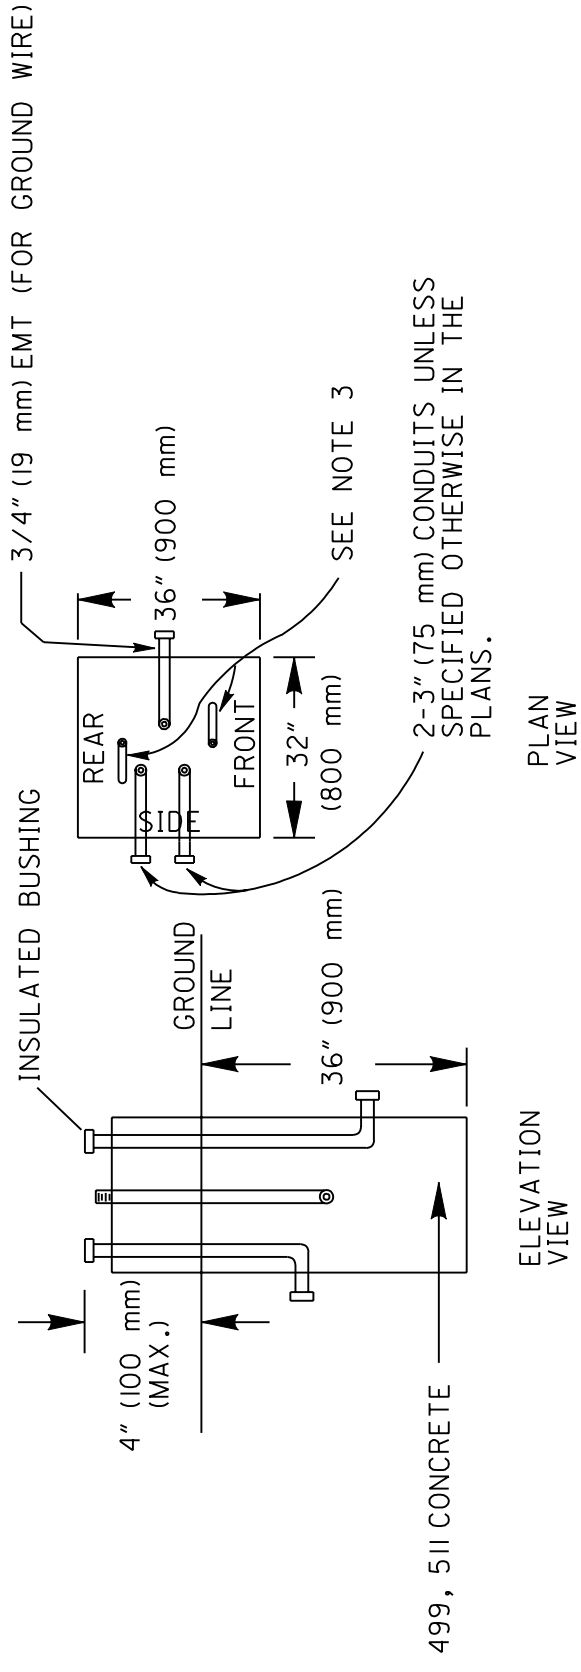

332/336 CONTROLLER WORK PAD
(SEE NOTE 9)

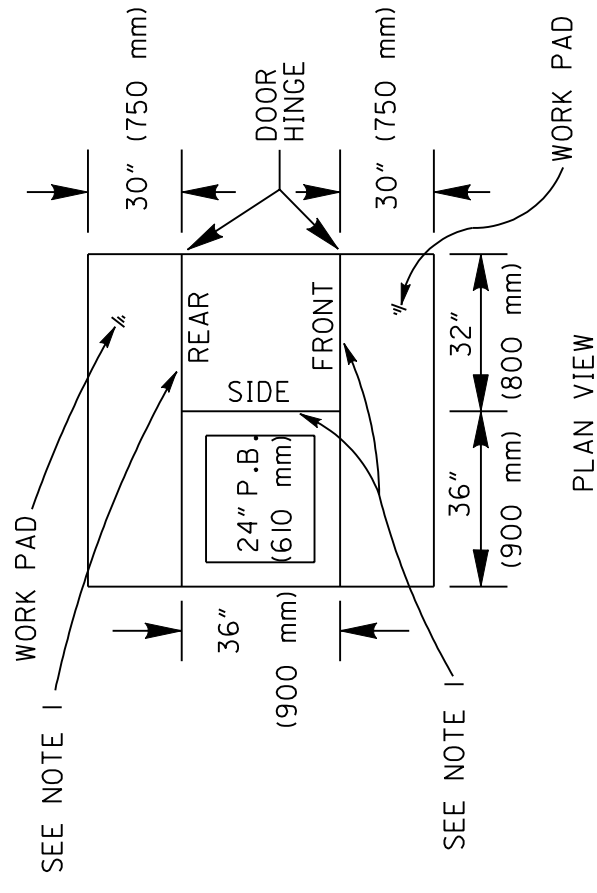

NOTE: PULLBOX SHALL BE PLACED ON OPPOSITE SIDE OF DOOR HINGE