


SHRUB PLANTING DETAIL

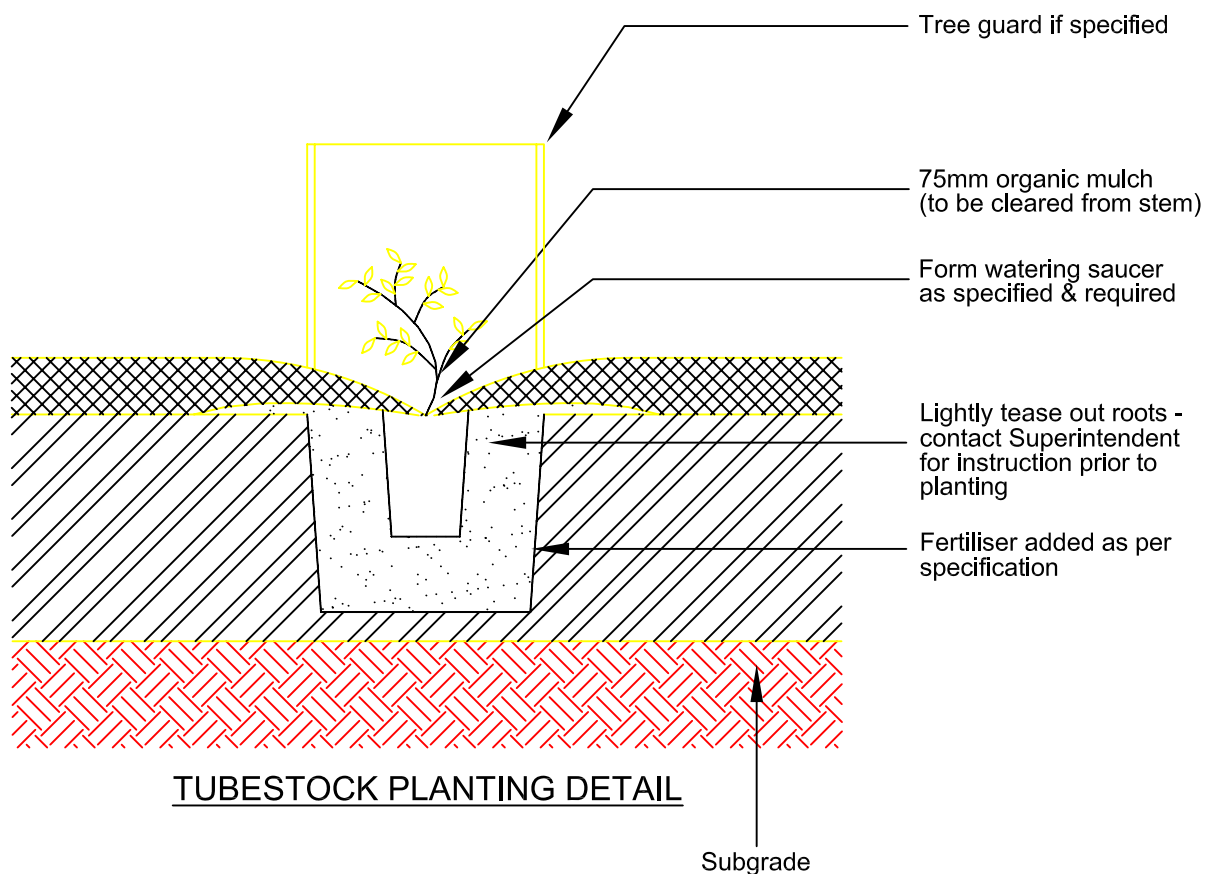

TUBESTOCK PLANTING DETAIL

Notes:

1. Dig hole twice as deep as rootball and allow at least 200 mm around sides for backfilling with topsoil.
2. Apply fertiliser to bacfill (type & rate as specified). Avoid direct contact with roots.
3. Place plant in centre of hole, backfill with approved topsoil, firming progressively. Ensure that soil level does not exceed base of tree stem.
4. Water well into saucer around crown of plant.
5. Stake larger shrubs where necessary, using 50 x 50 x 1200 mm hardwood stakes.

Drawing Title:
Shrub Planting Detail

Dwg No. OS. 06
Scale at A4 1: 10
Updated 06/09/02
Yarra Standard: YSD65

